


Update BIOS


- 1 Save the BIOS file version X99MK3.30B and BOXX_3402_Profile.BIN to a USB disk
- 2 Press [F2] during POST to get into BIOS setup menu.
- 3 Select the Instant Flash utility under [Tool] menu to execute it.

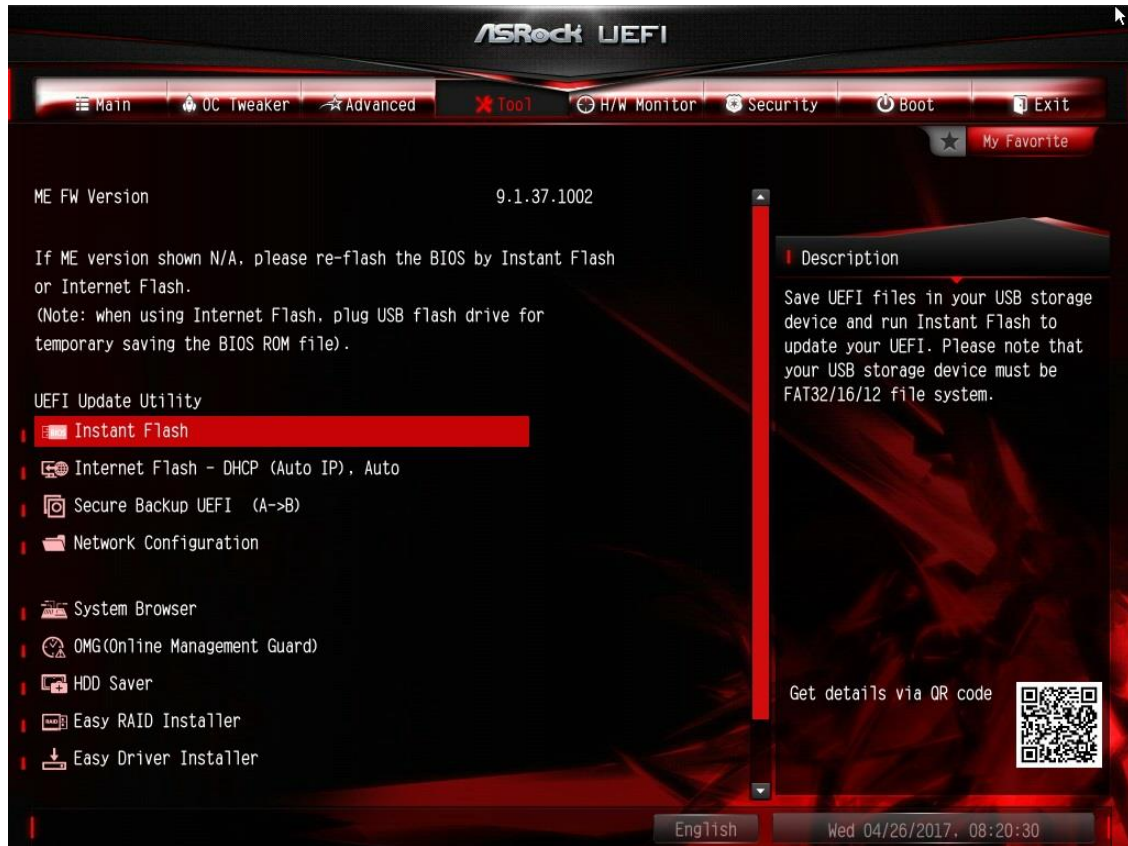

- 4 ASRock Instant Flash will automatically detect all devices and only list those BIOS versions which are suitable for your motherboard.



- 5 Select Update to begin flashing
- 6 When update process is complete you will be prompted to press enter to reboot the system

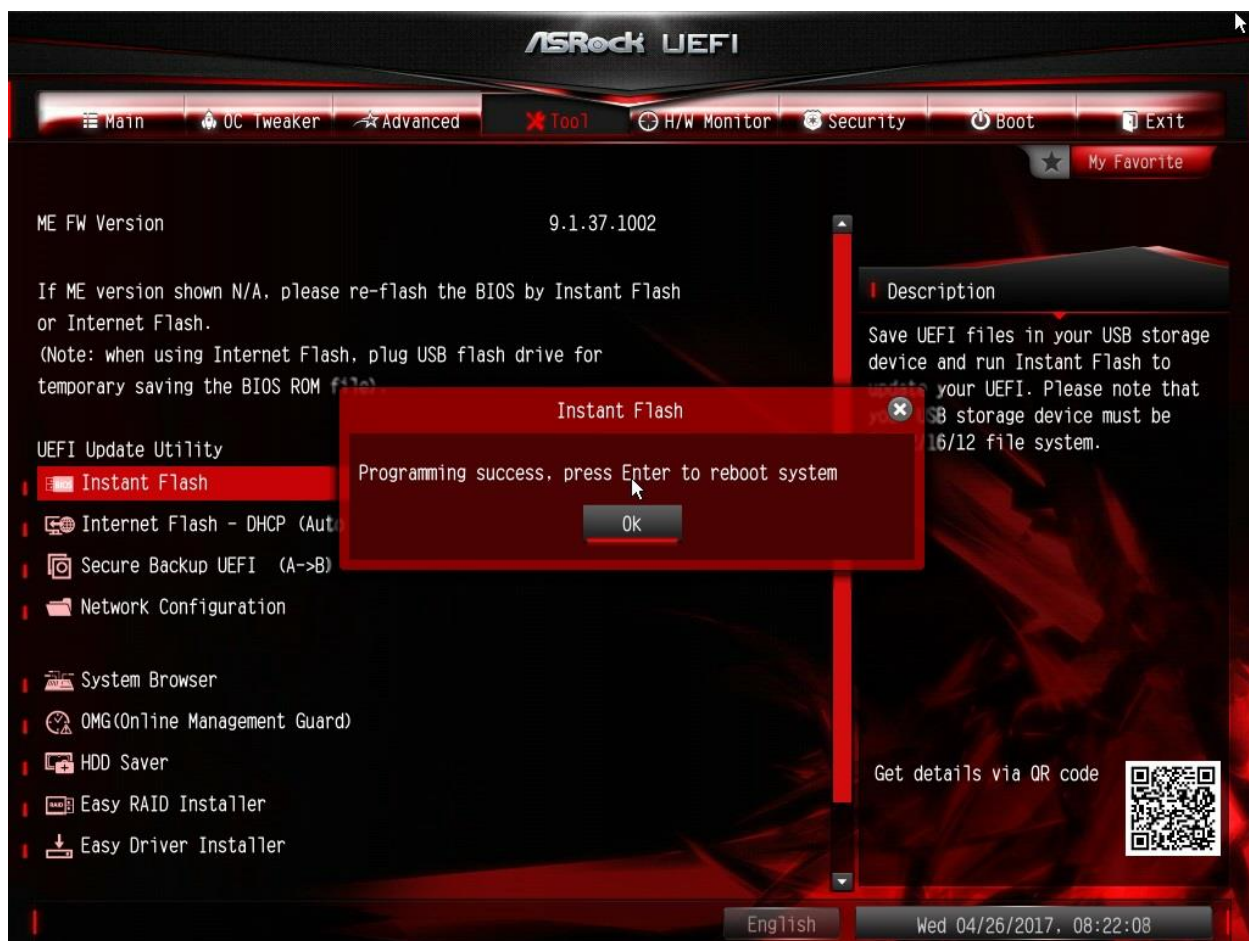


Load BIOS Overclock Profile


- 7 Press [F2] during POST to enter into BIOS setup menu again.
- 8 Select Load User UEFI Setup Profile from Disk under [OC Tweaker] menu to execute it.



9 Select your USB disk from the drop down menu

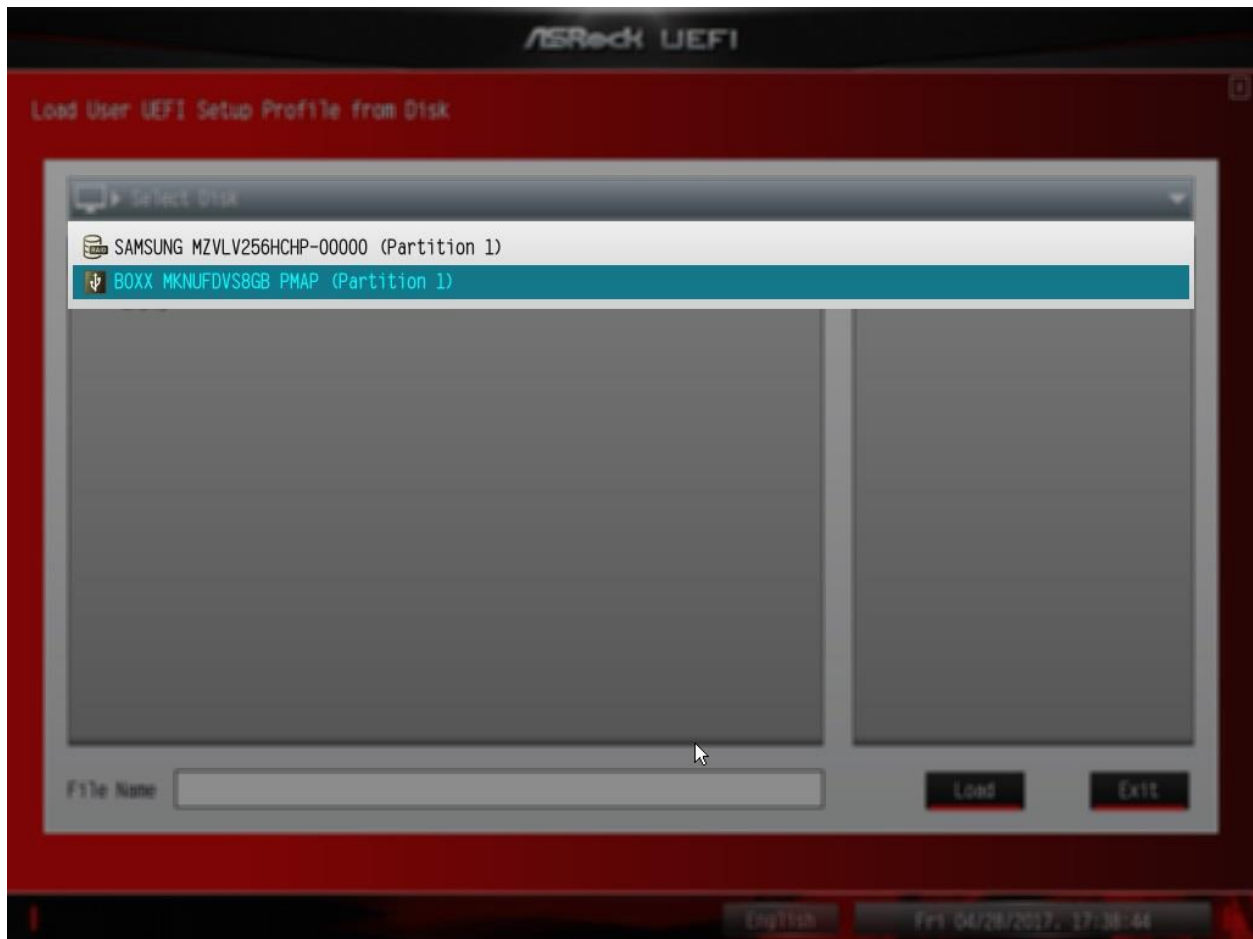

- 10 Highlight the BOXX_3402_Profile.BIN file and press Enter to load profile. Select Yes when prompted to restore the profile and settings.

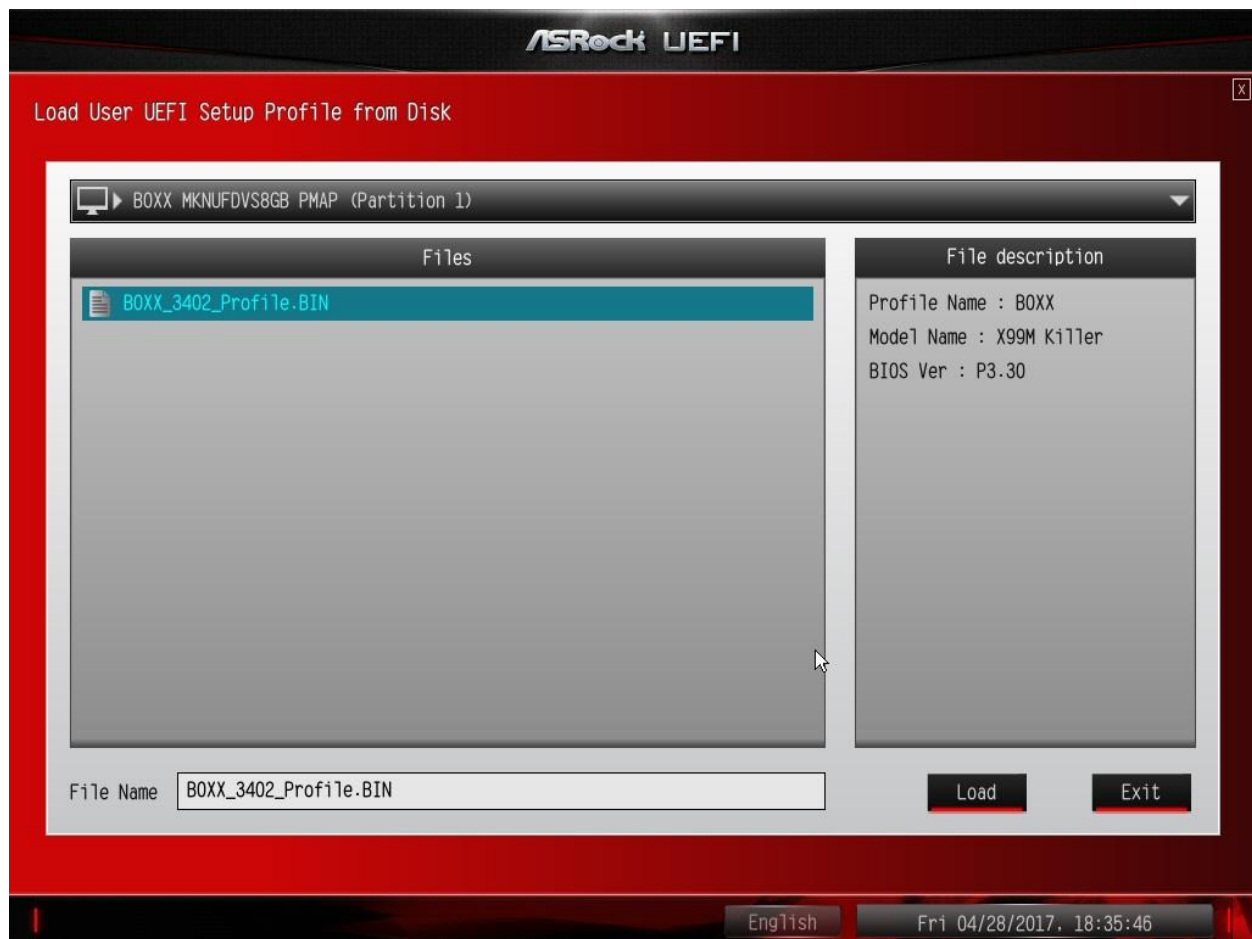

- 11 When profile is restored, press enter to return to the main BIOS screen
- 12 Press [F10] and select Yes to save changes and exit BIOS.

